



# Type 22 Pillbox

## B28-WW2-202 / B20-ST-202

Please read these instructions fully before starting construction.

PVA or equivalent glue will be required to stick sections together.


Sand paper can be used to gently clean any joints.

A sharp modelling knife will be required to remove sections from the sprue. Please use knives with due care and remember to cut away from yourself at all times.


During the construction of this model, you may find it convenient to use pegs / elastic bands to hold pieces in place while you allow glue to dry.

A full-colour copy of these instructions can be found on our website: [www.blotz.co.uk](http://www.blotz.co.uk)


### Type 22 Pillbox

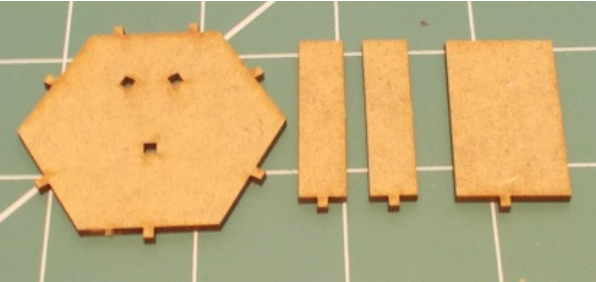


Remove the base piece and three sections of blast wall from the sprue.

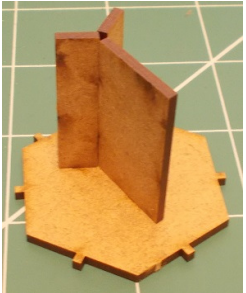

Glue the blast wall to the base as shown. Note the long wall only fits correctly one way round.

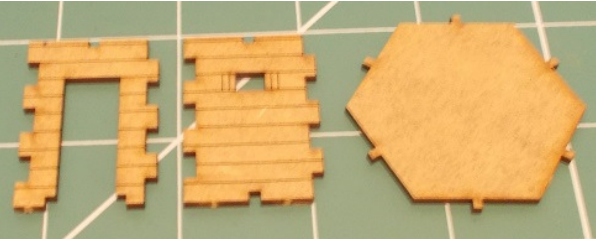


Take the door section, one wall and the roof from the sprue.

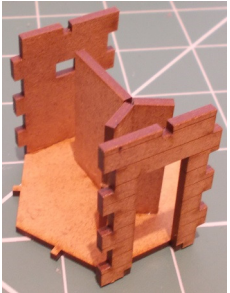

Glue the door in place (on the side which has 2 lugs on it and the wall on the opposite side as shown).



Attach the roof.

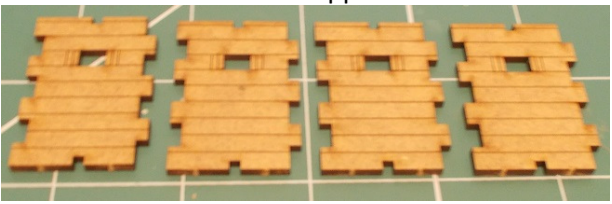

Take the other four wall pieces from the sprue.



Glue them into place.